

## Using the Canon R7



# Accessing 4K video

The Canon R7 is capable of filming in FHD and 4K video mode. Make sure you have the correct video size set, as well as the frame rate you want to record in.

1. Turn on camera to 'Video' mode



2. Press menu button



3. Use the joystick to navigate to the 'red' camera tab, and #1 page.

4. Choose '4K' or 'FHD'



5. Choose your frame rate: 50.00p or 25.00p



6. Press 'Set' or 'Menu' to exit menu