

Using the Canon R7



LCD screen
Shows mode settings, menus, live view and tap to focus.



Menu button

Quick menu & 'set' button

Play media button

Delete button

Focus mode
MF - Manual focus
AF - Auto focus

Accessing 4K video

The Canon R7 is capable of filming in FHD and 4K video mode. Make sure you have the correct video size set, as well as the frame rate you want to record in.

1. Turn on camera to 'Video' mode



2. Press menu button



3. Use the joystick to navigate to the 'red' camera tab, and #1 page.

4. Choose '4K' or 'FHD'



5. Choose your frame rate: 50.00p or 25.00p



6. Press 'Set' or 'Menu' to exit menu

Downloading files

OPTION 1 - Copy directly from the SD card

Required: SD Card reader

- Slide open the SD card slot on the right side of the R7
- Press the SD card inwards, then release pressure to remove the SD card
- Using an SD card slot or reader, insert the SD card
- Wait for your computer to show the SD card as a removable drive.
- Copy your files
- Remove and replace the SD card into the R7. Press the SD card inward, then release. The SD card should stay in place. Close the card panel.



OPTION 2 - Copy using USB cable

Required: USB Cable (included in R7 kit)

PC:

- Open the USB cable port rubber door on the left side of the R7.
- Connect USB-C cable to the camera and then to your computer
- Turn on the R7
- The camera should mount on your computer like an external drive
- Copy the files

MAC:

- Open the USB cable port rubber door on the left side of the R7.
- Connect USB-C cable to the camera and then to your computer
- Turn on the R7
- Open 'Image Capture' program on your mac computer (it comes installed with the operating system).
- Select the files to download.

